

Soundproofing America Online Store
“Soundproofing From Coast to Coast”

Toll Free Line: 800-823-6817

West Coast Number: 760-888-7515


East Coast Number: 347-328-0501

SOUND SEAL (Stage 2)

- 1.** Remove trim from slab side of door.



- 2. A** Install sealant backer rod into space between doorjamb and rough opening a minimum of 1" deep. **B** Squeeze in acoustical sealant.

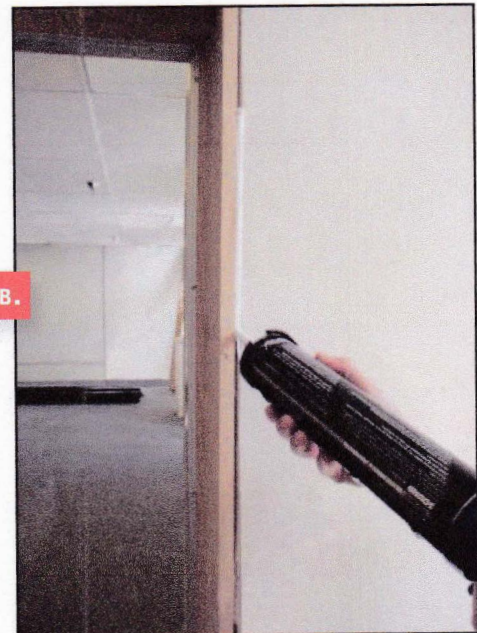


Soundproofing America Online Store
“Soundproofing From Coast to Coast”

Toll Free Line: 800-823-6817

West Coast Number: 760-888-7515

East Coast Number: 347-328-0501

3. Replace trim and nail to wall as needed.

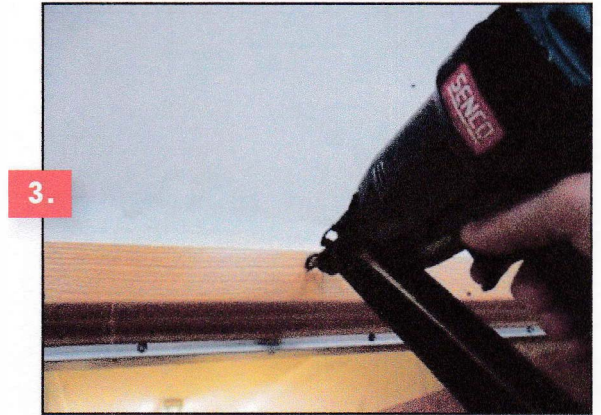

4. Fill holes with wood putty and sand.

Soundproofing America Online Store
“Soundproofing From Coast to Coast”

Toll Free Line: 800-823-6817

West Coast Number: 760-888-7515

East Coast Number: 347-328-0501

HANDLESET

1. Install handleset per instructions included with handleset.

INSTALL TIP: If the standard GU Hardware is selected, it is a universal hardware system and can be used for a right or left handed door.

Please refer to your GU hardware installation instructions to change handing of door hardware.


Venice - Passage Only



Venice - Thumb Turn Deadbolt



Venice - Keyed Deadbolt

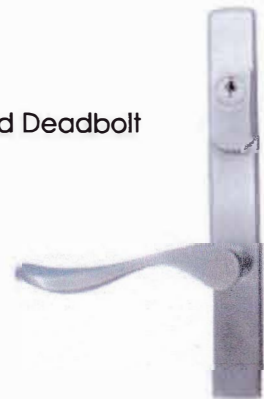

Soundproofing America Online Store



“Soundproofing From Coast to Coast”

Toll Free Line: 800-823-6817

West Coast Number: 760-888-7515

East Coast Number: 347-328-0501

INSTALLING JAMB TO DOOR SEALS

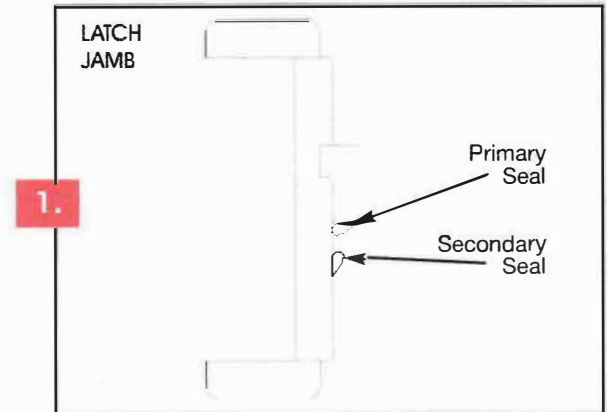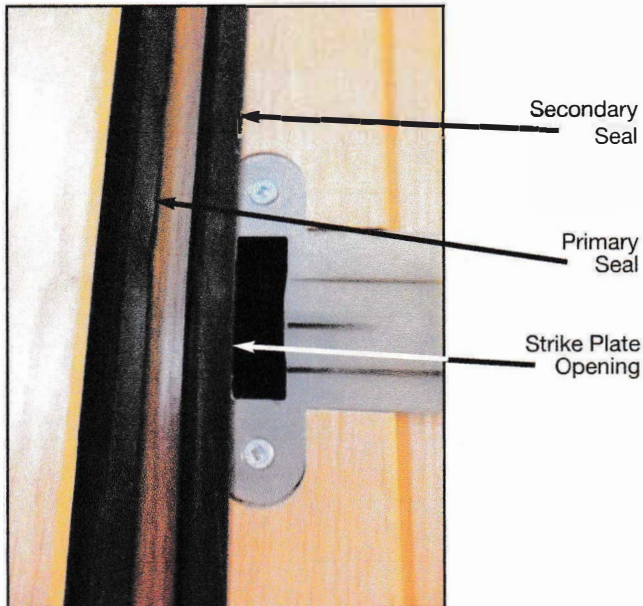

- 1.** Begin by installing the secondary seal on the latch jamb side of the door. Rough cut a length of seal approximately 2" longer than needed to run the entire distance from the top the top of the door to the floor. Starting at the top of the door jamb remove about 1 8" or so of the protective facing from the self-stick adhesive and butt the end of the seal against the top of door jamb. While aligning the flat edge of the seal with the back edge of the strike plate opening (see photo-1). Remove more protective facing while you work your way down keeping the seal parallel with the remaining two strike plates and permanently attach the seal to the door jamb. Trim flush at the bottom.

Soundproofing America Online Store
“Soundproofing From Coast to Coast”


Toll Free Line: 800-823-6817

West Coast Number: 760-888-7515


East Coast Number: 347-328-0501

INSTALLING JAMB TO DOOR SEALS Cont.

2. Next install the secondary seal at the top of door jamb as described previously by first butting the seal into the latch jamb seal. Align parallel with the door jamb and trim flush with the hinge jamb.

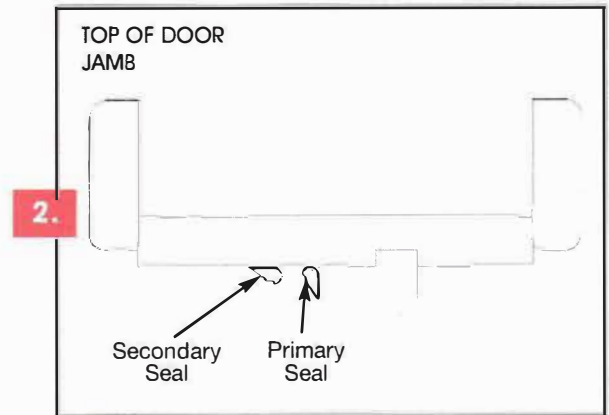

3. Repeat this process by butting hinge jamb seal into top of door jamb and working your way down and trimming flush at the bottom.

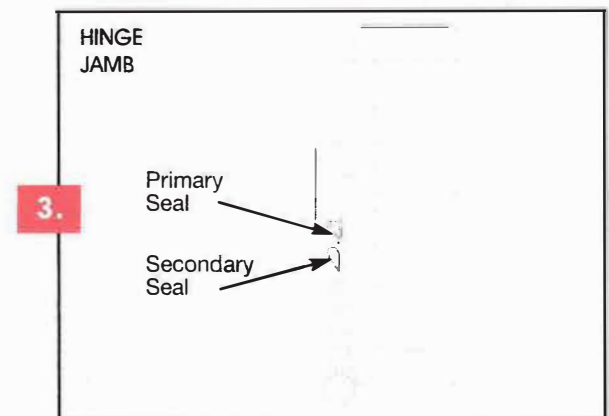

PRIMARY SEAL INSTALLATION:

1. The primary seal is to be installed in the same order as the secondary seal (latch jamb, top of door jamb, hinge jamb).
2. Note that the latch jamb and top of door jamb seals are to attach to the door stop as shown in fig. 1 & 2 and the hinge jamb seal is to attach to the hinge jamb as shown in fig. 3.